


IDENTIFICATION OF THE PARTS: FOR CANON EOS R5 MARK II HOUSING


Before inserting the machine:




- Raise the ON/OFF control and rotate it anti-clockwise just beyond OFF (10);
- Insert the machine, (see p. 13);
- Put the button back in position;

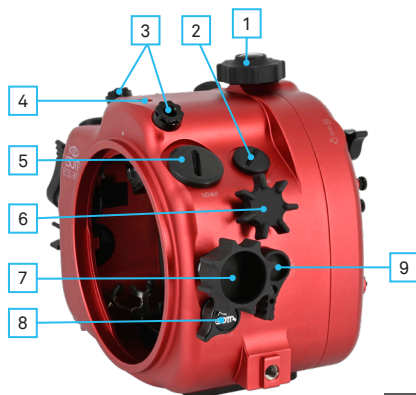



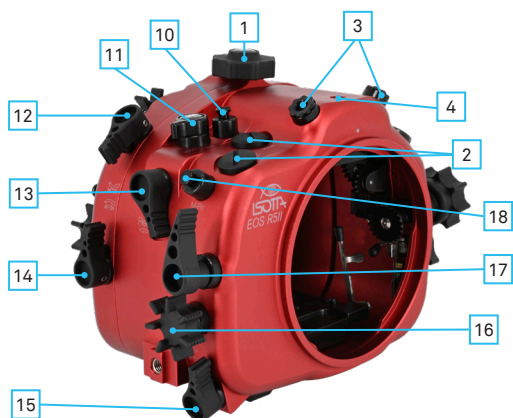

1. Locking knob
2. Hole M16x1
3. Fiber optic connection
4. Hole M8
5. Hole M24x1
6. Zoom knob with RF lens
7. Zoom knob with EF lens
8. Port safety lever
9. Lens release lever



EN



10. LCD panel info switching/illumination/cropping button  /  / 
11. ON/OFF mechanism
12. Mode button
13. Movie shooting lever (REC)
14. (AF-ON) AF start lever
15. Depth-of-field preview button
16. Main dial
17. Shutter button lever
18. (M-Fn) Multi-function button

19. Vacuum system LED
20. Rating/Voice memo button (RATE)
21. MENU button
22. Still photo shooting/movie recording switch
23. Viewfinder
24. Humidity sensor led
25. Mode dial
26. Multi-controller buttons
27. Multi-controller center button
28. AF point selection button 
29. AE lock button
30. Quick control dial 1 * 
31. Magnify/Reduce button 
32. Quick Control button 
33. Playback button 
34. Erase button 
35. SET button
36. INFO button

