


# IDENTIFICATION OF THE PARTS: FOR CANON EOS R6 MARK II HOUSING


Before inserting the machine:

- Raise the ON/OFF control and rotate it anti-clockwise just beyond OFF (10);
- Insert the machine, (see p. 13);
- Put the button back in position;



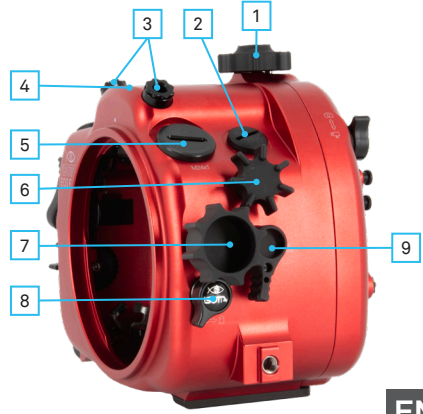

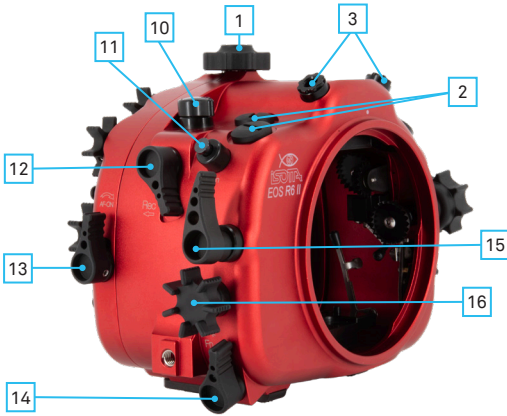

1. Locking knob
2. Hole M16x1
3. Fiber optic connection
4. Hole M8
5. Hole M24x1
6. Zoom knob with RF lens
7. Zoom knob with EF lens
8. Port safety lever
9. Lens release lever



EN



10. ON/OFF mechanism
11. (M-Fn) Multi-function button
12. Movie shooting lever (REC)
13. (AF-ON) AF start lever
14. Depth-of-field preview button
15. Shutter button lever
16. Main dial

17. Vacuum system LED
18. Rating/Voice memo button (RATE)
19. MENU button
20. Still photo shooting/movie recording switch
21. Viewfinder
22. Humidity sensor led
23. Mode dial
24. Quick control dial 2
25. Multicontrol buttons
26. AF point selection button 
27. AE lock button
28. Quick control dial 1 \* 
29. Magnify/Reduce button 
30. Quick Control button 
31. Playback button 
32. Erase button 
33. SET button
34. INFO button

