



IDENTIFICATION OF THE PARTS: FOR NIKON Z7II&Z6II HOUSING

1. Locking knob
2. Fiber optic connection
3. Hole M28x1
4. Hole M16x1
5. ZOOM gear
6. Port safety lever
7. Fn2 button lever
8. Lens release button

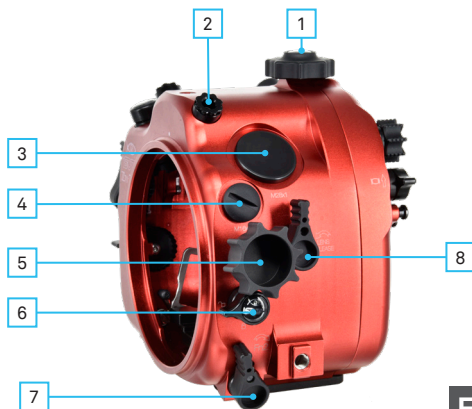


EN

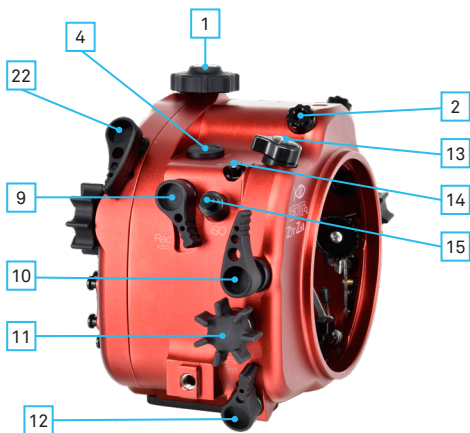

9. (REC) Movie-record button lever
10. Shutter-release button lever
11. Sub-command dial
12. Fn1 button lever
13. On-Off lever
14. Exposure compensation button
15. ISO button

16. Delete button
17. Playback button
18. Monitor mode button lever
19. Mode dial
20. Viewfinder
21. Humidity sensor led
22. AF-ON button lever
23. Photo/movie selector
24. Main command dial
25. AE-L button
26. Multi-selector and Ok button
27. Menu button
28. Release mode button
29. Thumbnail Playback and focus point button
30. Zoom in button

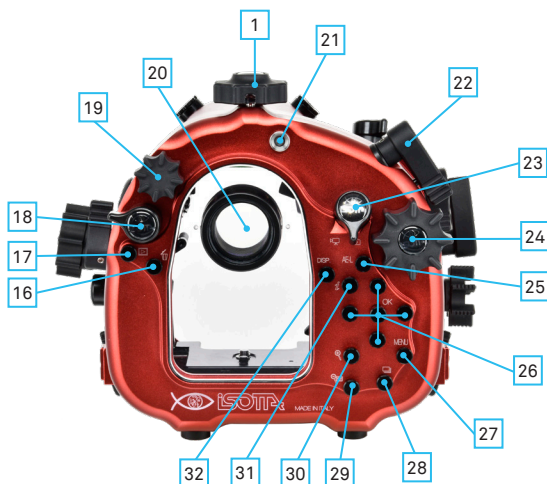

31. *i* button
32. DISP button