



# IDENTIFICATION OF THE PARTS: FOR NIKON Z8 HOUSING

1. Locking knob
2. Fiber optic connection
3. Hole M8
4. Hole M24x1
5. Hole M16x1
6. Zoom knob
7. Port safety lever
8. Fn2 lever
9. Lens release lever
10. Focus-mode button

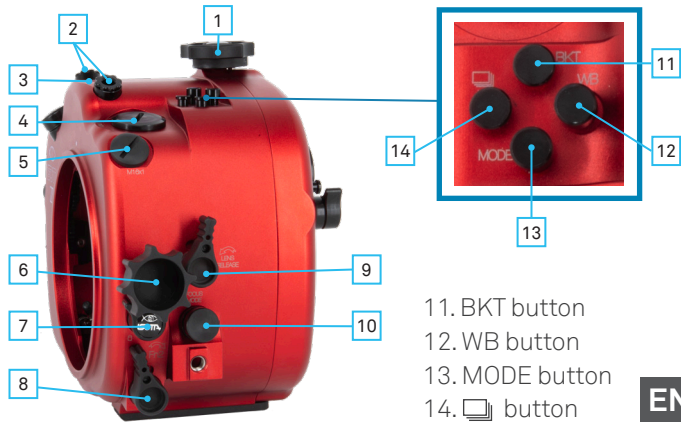


11. BKT button
12. WB button
13. MODE button
14. button

EN

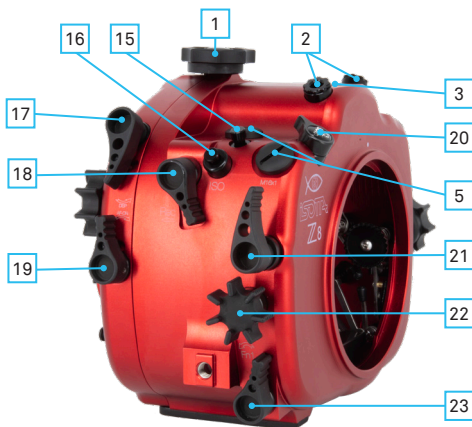

15. button
16. ISO button
17. DISP. lever
18. Video-record button (REC)
19. AF-ON lever
20. Power switch lever (ON/OFF)
21. Shutter-release lever
22. Sub-command dial knob
23. Fn1 lever

24. Vacuum sensor led (if in use)
25. / (Fn3) button
26. Monitor mode lever
27. button
28. Viewfinder
29. Humidity sensor led
30. Photo/video selector lever
31. Main command dial knob
32. OK button
33. Multi-selector
34. button
35. MENU button
36. button
37. button

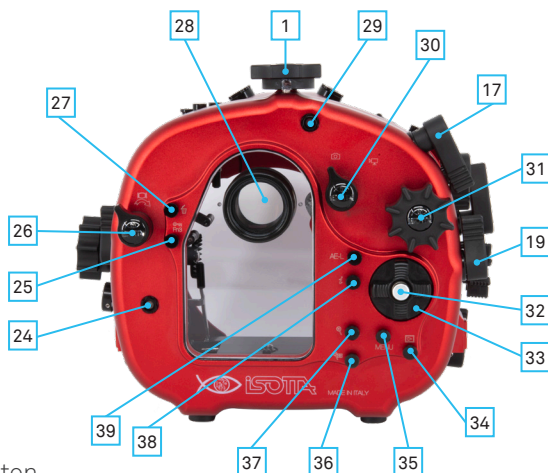

38. *i* button
39. Sub-selector button