



IDENTIFICATION OF THE PARTS: FOR NIKON Z9 HOUSING

1. Locking knob
2. Fiber optic connection
3. Hole M28x1
4. Hole M16x1
5. Zoom knob
6. Port safety lever
7. Focus-mode button
8. Fn3 lever
9. Release mode knob
10. Lens release lever

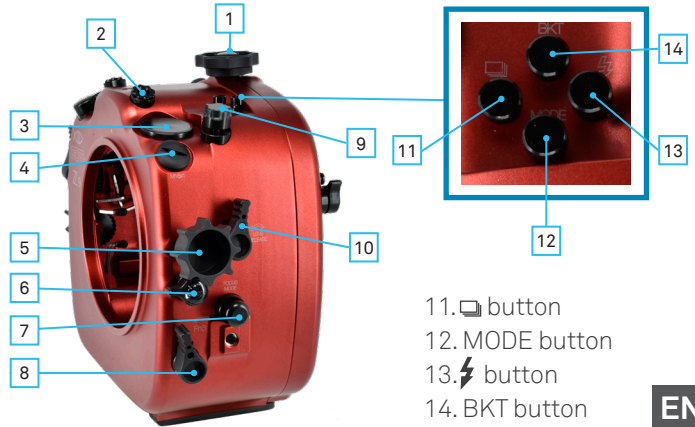


11. button
12. MODE button
13. button
14. BKT button

EN

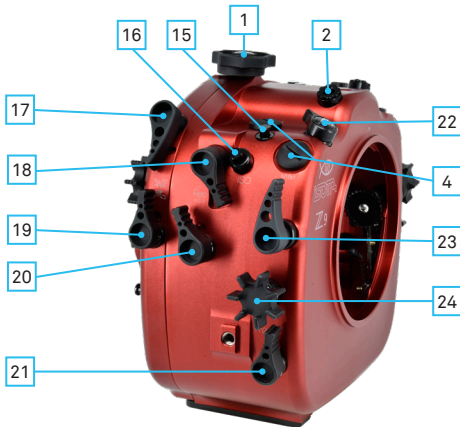

15. button
16. ISO button
17. AF-ON lever
18. Video-record button (REC)
19. DISP lever
20. Fn1 lever
21. Fn2 lever
22. Power switch lever (ON/OFF)
23. Shutter-release lever
24. Sub-command dial knob

25. (Fn4) button
26. button
27. button
28. Viewfinder
29. Humidity sensor led
30. Photo/video selector lever
31. Main command dial knob
32. Multi selector
33. OK button
34. MENU button
35. button
36. button
37. button
38. WB button
39. QUAL button

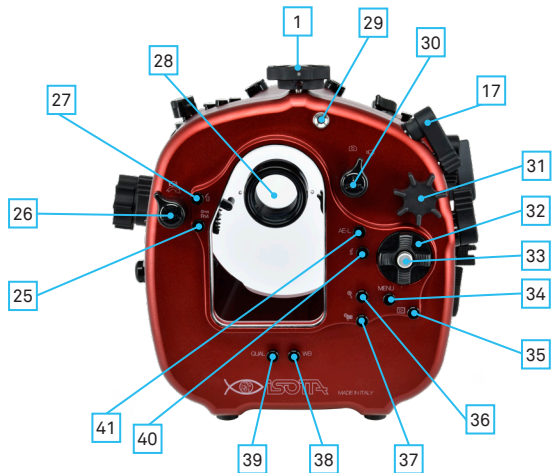

40. button
41. AE-L button