





IDENTIFICATION OF THE PARTS: FOR OLYMPUS EM-1 MARK III HOUSING





1. Locking knob
2. Hole M8
3. Fiber optic connection
4. Hole M16x1
5. ZOOM gear
6. Lens release button
7. Port safety lever
8. Sensore di umidità
9. ON/OFF lever
10. AF/[] lever
11. []/[] HDR button

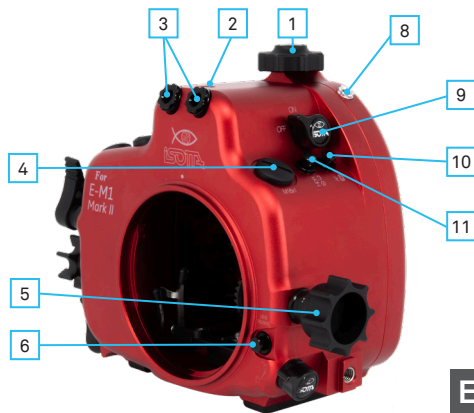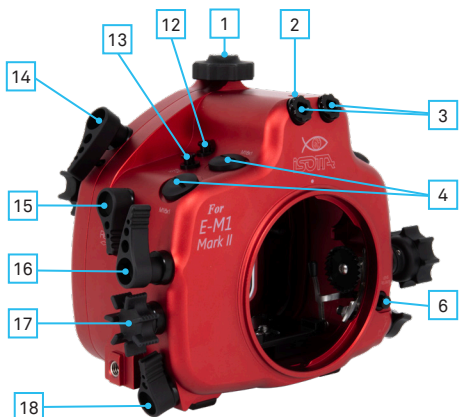

EN



12. Mode dial lock button
13. Fn2 button
14. AF-ON lever
15. REC - Movie lever
16. Shutter lever
17. Front dial
18. One-touch white balance lever

19. Viewfinder
20. ON/OFF [] lever
21. [] button
22. MENU button
23. Mode dial
24. Rear dial
25. ISO button
26. Arrow pad and OK button
27. INFO button
28. [] button
29. [] button
30. Multiselector button
31. Fn lever

